


# DRIVER CONTROLS

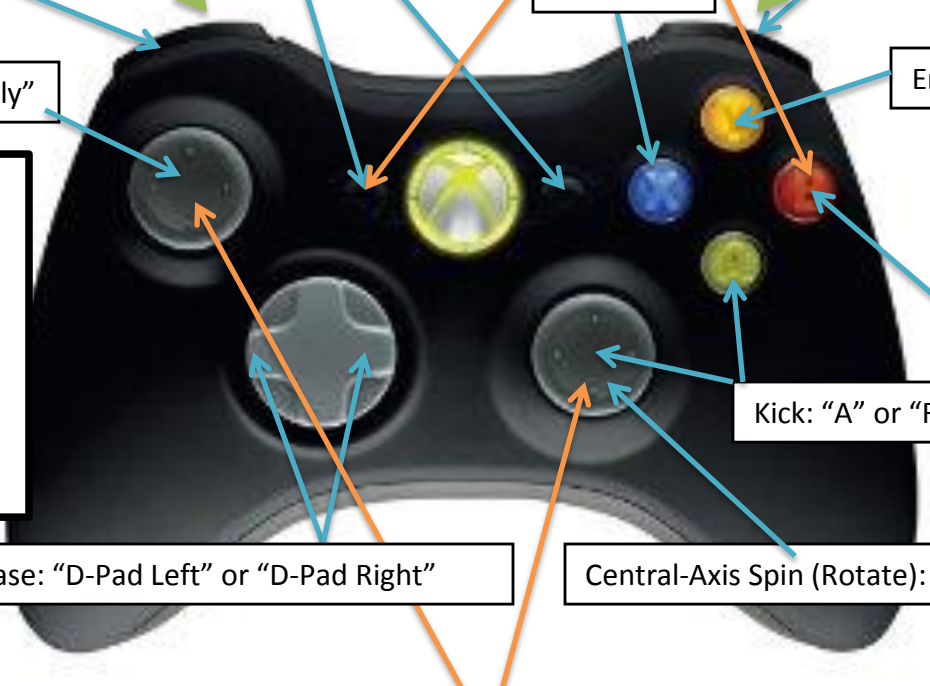

Rotate Around Ball to the Left: "Left Trigger" (Not Shown)

Rotate Around Ball to the Right: "Right Trigger" (Not Shown)

Calibrate: "Back" & "Start"

Instant Release: "B" & "Back"

Possessor Out: "Left Bumper"

Possessor In: "Right Bumper"

Crab Mode: "Left Joystick Only"

Arm: "X"

End Calibration Mode: "Y"

Alignment Mode: "B"

Kick: "A" or "Right Joystick Button"

Safe Kicker Release: "D-Pad Left" or "D-Pad Right"

Central-Axis Spin (Rotate): "Right Joystick Only" (Left/Right)

Snake Mode: "Left Joystick -> Y-Axis" and "Right Joystick -> X-Axis"

# OPERATOR CONTROLS

